

PRIME CHILLER™

Commercial Chiller

Instructions for Models
2610,2642,2640,2641

Warning and Safety Instructions	Page 2
Chiller Installation	Page 3
Programming Thermostat	Page 4
Warranty.....	Page 5



CURRENT

WHAT'S NEXT

EMAIL: INFO@CURRENT-USA.COM
WWW: WWW.CURRENT-USA.COM

SAFETY INSTRUCTIONS

WARNING

To guard against injury, basic safety precautions should be observed, including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

DANGER

To avoid possible electric shock, special care should be taken since water is employed in the use of aquarium equipment. For each of the following situations, do not attempt repairs by yourself. Return the appliance to your retailer or discard the appliance.

- If the appliance falls into the water, or water drips onto the unit, **DON'T** reach for it! First unplug it and then retrieve it. If electrical components of the appliance get wet, unplug the appliance immediately.
- Always unplug appliance from an outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank cord to pull plug from outlet. Grasp the plug fully and pull out to disconnect.
- Carefully examine the appliance after replacement. It should not be plugged in if there is water on parts not intended to be wet.
- Do not operate any appliance if it has a damaged cord or plug, or if it is malfunctioning or has been dropped or damaged in any manner.
- If you are using the ultraviolet sterilizer or heater upgrade do not operate the unit without continual water flow.
- If you are using the heater option ensure that the heater is plugged into the thermostat that is supplied with the water chiller.
- Exposing chiller/power cords to water may cause electrical short and fire.
- Do not allow water or salt to come in contact with thermostat or power cords.
- Do not operate chiller without water flow to the unit. This may cause the evaporator housing to freeze up and result in damage to the unit.

SAVE THESE INSTRUCTIONS

GROUND FAULT CIRCUIT INTERRUPTER PROTECTION

To comply with the National Electrical Code (NFPA 70), and to provide additional protection from the risk of shock, this unit **MUST** be connected to a ground fault circuit interrupter (GFCI) outlet at all times. Do not use extension cords. **WARNING** – To reduce the risk of electrocution, keep all connections dry and off the ground. Do not touch plug with wet hands.



CURRENT

WHAT'S NEXT

CHILLER INSTALLATION

PRE-INSTALLATION

Before removing your Prime Chiller from the box, please note any exterior shipping damage to the box. It is strongly recommended to keep the box and packaging material in the unlikely event there is shipping damage or service is required.

Remove the chiller from the box and inspect thoroughly for any signs of damage, even if the box does not show damage. If you notice any damage (cracked or bent cover, damaged condenser fins, etc.) please stop and contact your dealer immediately.



INSTALLATION

1. Remove accessories and plumbing fittings for inlet and outlet.
2. Slide chiller from box and inspect for damages.
3. Place chiller in desired location. Make sure the chiller is placed on a firm, level surface in a location that has plenty of ventilation and will not be exposed to salt or saltwater.

The requirements for ventilation are:

- a) Back/Sides: Condenser (radiator) requires at least 24" clearance to allow air into the chiller.
- b) Front: Requires at least 24" clearance to allow for proper air flow.
- c) Chiller must not be placed in a closed closet or cabinet.
- d) The warm air from the chiller must be completely evacuated from the chiller location. A fan may be necessary to draw warm air away from the chiller. The maximum operating temperature is 95 F.

4. Assemble the water inlet and outlet to the chiller. Ensure the seal ring is properly seated.

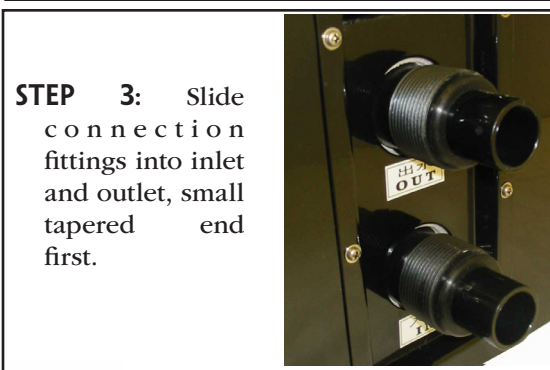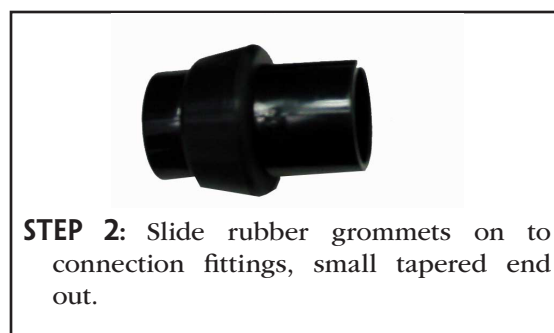

PROGRAMMING THERMOSTAT

5. Connect main water line to $\frac{3}{4}$ " slip inlet and outlet. Note: PVC cement must be used to attach the $\frac{3}{4}$ " plumbing line to inlet and outlet of chiller. We highly recommend plumbing quick disconnect fittings at inlet/outlet in case service is required.
6. Before turning on chiller, ensure the following:
 - a) Flow water through the chiller for approximately 30 minutes to ensure there is no water leakage.
 - b) Make sure the pump will operate normally without any blockage.
 - c) Make sure the chiller is plugged into a GFCI protected 110V power outlet.
7. Set the temperature controller to the desired temperature as instructed next.

CHILLER TEMPERATURE ADJUSTMENT

1. Plug the chiller into the GFCI protected outlet. The power switch will come on and the digital controller with display the actual water temperature. Press the on/off button, the "POWER" light will illuminate.
2. Press > to increase temperature and press < to decrease temperature. Press the cool button. (The default temperature differential is 2°F, therefore the chiller will begin to operate at a temperature that is 2°F less than the actual water temperature.)
3. The digital display will resume showing the water temperature after a 5 second delay. The chiller will then enter a delayed start-up mode, which lasts up to 2 minutes, after which will begin normal operation.

MAINTENANCE

1. Clean the condenser (radiator) fins regularly. Using a vacuum and soft brush attachment, remove lint, dust and animal fur at least once per month to allow optimal heat removal and to prevent the compressor and electrical components from overheating. Periodically inspect the inlet & outlet for leakage. Although most aquarists typically do inspect all their fittings once in awhile, it is import to inspect the fittings attached to the chiller as saltwater can damage the components of the chiller if not discovered.

Model#	HP	Volts	Amps	Temp Range	Flow (GPM)	Inlet/Outlet	Refrigerant
2610	1	115	9.1	50-80F	20-26	1"	R22
2642*	1.5	230	10.3	50-80F	24-42	1- $\frac{1}{4}$ "	R22
2640*	2	230	11.0	50-80F	24-42	1- $\frac{1}{4}$ "	R22
2641*	3	230	15.6	50-80F	24-42	1- $\frac{1}{2}$ "	R22

WARRANTY

CURRENT USA, INC. ONE-YEAR LIMITED WARRANTY

Current USA, Inc. warrants this product against defects in materials and workmanship for a period of ONE (1) YEAR from the date of original retail purchase. Light Bulbs carry a 3 month warranty.

Warranty on all Products, including Aquariums, is limited to the replacement of the product and does not cover fish loss, personal injury, property loss or direct, incidental or consequential damages arising to the use of this product.

Note: Current-USA, Inc. One-Year Limited Warranty does not cover damage caused by the following: Improper installation, saltwater corrosion, and electrical surges.

If you discover a defect, Current USA, Inc. will, at its option, repair or replace the product at no charge to you, provided you return it during the warranty period. It is required that you present this warranty card and a copy of the bill of sale as proof of original purchase date, in the event the product needs repairs, within the warranty period. Please see your dealer for return options. This warranty applies only to products by or for Current USA, Inc. that can be identified by trade name, or logo affixed to them. Current-USA, Inc. does not warrant any products that are not Current-USA, Inc. products. This warranty does not apply if the product has been damaged by accident, abuse, misuse or misapplication or if the product has been modified without the written permission of Current-USA, Inc.; or if any Current-USA, Inc. logos have been removed or defaced.

THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHERS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. Current USA, Inc. SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING ANIMALS, PLANTS, TANKS OR OTHER AQUARIUM RELATED ITEMS AND/OR EQUIPMENT. Current USA, Inc. IS NOT RESPONSIBLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY, OR REPLACEMENT OF EQUIPMENT OR PROPERTY, OR ANY COSTS OF RECOVERING OR REPRODUCING ANY EQUIPMENT, ANIMALS OR PLANTS USED OR GROWN WITH Current USA, Inc. PRODUCTS.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or exclusions of implied warranties, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from jurisdiction to jurisdiction.