

REPLACING FANS

FOR SATELLITES & ORBIT FIXTURES

DANGER

To avoid possible electric shock, special care should be taken since water is employed in the use of aquarium equipment. For each of the following situations, do not attempt repairs by yourself. Return the appliance to your retailer or discard the appliance.

- If an electrical appliance falls into the water, or water drips onto the electronics, DON'T reach for it! First unplug it and then retrieve it. If electrical components of the appliance get wet, unplug the appliance immediately.
- Always unplug appliance from an outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank cord to pull plug from outlet. Grasp the plug fully and pull out to disconnect.
- Carefully examine the appliance after replacement. It should not be plugged in if there is water on parts not intended to get wet.
- Do not operate any appliance if it has a damaged cord or plug, or if it is malfunctioning or has been dropped or damaged in any manner.

REPLACEMENT INSTRUCTIONS:

ALL FIXTURES:

1. Unplug fixture and place upside down on a flat surface. Carefully remove the splash lens and lamp(s).
2. Remove the screws that hold the end panel in place, also remove the four (4) screws that hold the fan.
3. Cut the two thin wires for the fan approximately 1" from the fan housing. Place new fan in place, ensuring that the fan is blowing out (there is an indicator on the fan.)
4. Using wire nuts (included), reconnect wires. Make sure that nothing is touching the fan blades, replace four screws and then reattach end panel. Replace end panel screws.
5. Replace reflector and lamp(s). Replace splash lens and test before putting fixture back on the tank.

IKE 06/15/05



CURRENT

WHAT'S NEXT