

# SUNDIAL TIMER TIPS

## READ AND FOLLOW ALL SAFETY INSTRUCTIONS INCLUDED IN THE SUNDIAL MANUAL

The following tips are written to aid in programming our timers included in both SunDial T5HO & HQI fixtures"

Instructions:

A. Set the current time - Turn the rotary disc till the "Arrow" points to the current time.

B. To set the "ON" and "OFF" time:

1. There are 96 push down plastic slices (gray tabs) on the rotary disc. Each slice or tab stands for 15 minutes.
2. If the desired Turn On time is for 8 hours (480 minutes), 32 tabs would have to be depressed (pushed outwards towards outer edge of dial) between the desired time increments.
3. Depress tabs outward to set the amount of time the lights will be ON.
4. Keep tabs pressed inwards towards center to set the amount of time the lights will be OFF.
5. Plug the fixture into the power outlet and activate timers by sliding **Manual Timer Switch** to "ON". Ensure all of the switches at the end of your light fixture are on the "ON" position.
6. To operate fixture manually without timer, turn **Manual Timer Switch** to "OFF" position. Fixture is now operated only by using the manual ON/OFF switches at the end of the fixture.

### Timer Tabs

Push tabs "out" to program on time.

### Master Timer Indicator

Indicates whether lights are on or off according to current timer setting



### Timer Functioning Indicator

When power, timer & switch are "on", the indicator will spin slowly in a clockwise position.

### Manual Timer Switch On/Off

ON - Fixture operates with switches and not timer (turns timer off)  
TIMER - Fixture operates under timer control (turns timer on)



**CURRENT**

WHAT'S NEXT