

GAMMA POND™

Ultraviolet Sterilizers

Instructions for Models
#1410-8w, 1411-15w, 1412-25w, 1403-40w

Important Safety Instructions	Page 2
Installation	Page 3
Maintenance & Winterizing	Page 5
Warranty	Page 6



CURRENT

WHAT'S NEXT

EMAIL: INFO@CURRENT-USA.COM

WWW.CURRENT-USA.COM

03-2006-JEE

SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

Ultraviolet Sterilizer must be plugged into a GFCI outlet at all times. Do not operate the lamp without water flow. Overheating may occur to the lamp or sterilizer body. Inspect unit once a month for any damage due to corrosion. Remove from service if damage is found.

Once the Gamma is assembled it is strongly recommended that you water test the unit while observing the operation for a minimum of 30 minutes to ensure that it is running properly and there are no leaks. At no point should you look directly at the un-installed UV lamp while lit as serious eye damage can occur. The clear threaded viewing sections on the UV body will indicate whether the lamp is working or not once the bulb is installed.

DANGER - To avoid possible electric shock, special care should be taken since water is employed in the use of aquarium equipment. For each of the following situations, do not attempt repairs by yourself; return the appliance to an authorized service facility for service or discard the appliance:

1. If electrical components of the sterilizer get wet, unplug the appliance immediately.
2. Carefully examine the sterilizer after installation. It should not be plugged in if there is water on parts not intended to be wet.
3. Do not operate sterilizer if it has a damaged cord or plug, or if it is malfunctioning or damaged in any manner.
4. If the plug or receptacle does get wet, DON'T unplug the cord. Disconnect the fuse or circuit breaker that supplies power to the fixture. Then, unplug and examine for presence of water in the receptacle.
5. Close supervision is necessary when any appliance is used by or near children.
6. To avoid injury, do not contact hot parts such as ballast and the like.
7. Always unplug the sterilizer from an outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank cord to pull plug from outlet. Grasp the plug and pull to disconnect.
8. Do not use the sterilizer for other than intended use. The use of attachments not recommended or sold by the sterilizer manufacturer may cause an unsafe condition.
9. Do not install or store the sterilizer where it will be exposed to the weather or to temperatures below freezing.
10. Make sure the sterilizer is securely installed before operating it.
11. Read and observe all the important notices on the sterilizer.
12. If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for less Amperes or watts than the sterilizer rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.



CURRENT

WHAT'S NEXT


SAVE THESE INSTRUCTIONS

INSTALLATION

POND UV INSTALLATION

Important: When setting up your UV it is very important that care be taken with assembly to avoid damage and to prevent leaks during operation. Once the Gamma UV is assembled, it is strongly suggested that you water test the unit while observing the operation for a minimum of 30 minutes to ensure that it is running properly and there are no leaks. At no point should you look directly at the un-installed UV lamp while operating as serious eye damage can occur. Clear viewing section on the UV body will indicate whether the lamp is working or not once the bulb is installed.

FITTINGS

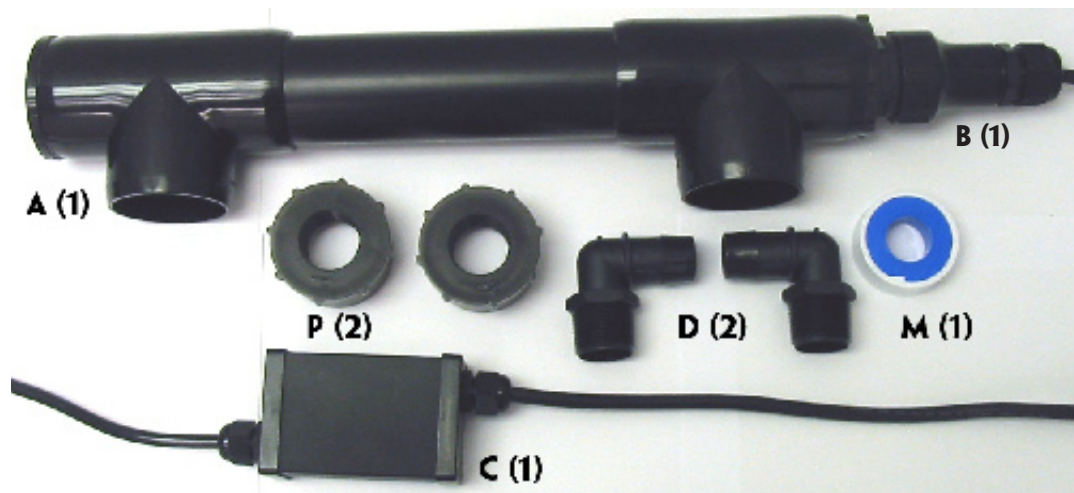

- A. Sterilizer Body (1)
- B. Quartz Locking Nut (1)
- C. Lamp Socket w/Ballast Assembly (1)
- D. 1" x 3/4" Hose Barb Fittings (2)
- M. Teflon Tape
- N. Quartz Sleeve (1)
- O. T5 UV Lamp (1)
- P. 2" x 1" SlipThread Bushing

* 40 watt unit does not include barb fittings (D).

INSTALLATION

1. Place the Gamma UV in a horizontal position. Connect socket assembly (C) to UV lamp (O) and slide lamp into quartz glass sleeve (N). Push rubber seal onto quartz sleeve, sealing the lamp & socket inside the quartz sleeve as shown below.



INSTALLATION

2. Connect socket assembly to lamp and slide the lamp into the quartz sleeve as shown in STEP A. Slide quartz sleeve into the UV body, ensuring the lamp is centered within the body. Hand tighten the quartz locking nut (Part B) making sure the quartz sleeve remains centered. Do not tighten remaining compression fitting (See STEP B) - you must water test the unit first before making any electrical connections. If the quartz tube is not installed correctly, water may leak.

STEP A

Slide lamp into quartz sleeve and slide sleeve into UV body. Seal sleeve with rubber seal



STEP B

Hand tighten quartz locking nut and water test for 30 minutes for leaks.



STEP C

After water test, hand tighten socket compression fitting.



3. Once you have completed the plumbing, turn the pump on supplying water to the sterilizer. Check all connections on the unit for leaks and monitor for at least 30 minutes. If leaks occur, it may be necessary to tighten fittings.
4. Hand-tighten socket cord to locking nut as shown in STEP C above. Once tightened, plug in the power cord to the ballast. The UV lamp should come on and you will see a faint glow coming from the clear fitting at the either end of the unit. Unplug the power cord as soon as you have verified that the lamp is functioning and place the UV back into operation. If you do not see a glow, make sure that the lamp is firmly seated into the socket. If it still does not work, please contact your dealer.
5. The unit can be mounted either vertically or horizontally depending upon the application. If mounting the unit vertically, make sure that the power supply end is mounted at the top to ensure that any trapped air is forced out of the unit from the water pressure. If mounting the unit horizontally, the inlet and outlet should be facing up.



CURRENT

WHAT'S NEXT

MAINTENANCE/WINTERIZING

6. When using the unit for ponds and aquariums, NEVER place the unit directly into the water. The power supply and ballast should NEVER be submerged or placed in a location where rain water may collect and submerge the ballast.
7. This product MUST be connected to a ground fault circuit interrupter (GFCI) outlet at all times. Do not attempt to cut the ground plug off. This product is equipped with a grounded plug that must be plugged into an appropriate outlet that is properly installed and grounded in accordance with local codes and ordinances. Improper connection can result in the risk of electrocution. When in doubt, check with a local certified electrician.
8. Avoid using extension cords. If an extension cord is required, use only 3-wire extension cords that have 3-prong grounded plugs and 3-pole cord sockets that accept the plug from the product. Use only cords that are approved for outdoor use. These extension cords are identified by a marking "Acceptable for use with outdoor appliances; store indoors while not in use." Use only extension cords having an electrical rating not less than the rating of the product. Do not use damaged extension cords. Examine extension cord before using and replace if damaged. Do not abuse extension cord and do not yank on any cord to disconnect. Keep cord away from heat and sharp edges. Always disconnect extension cord from the receptacle before disconnecting the product from the extension cord.

WARNING

To reduce the risk of electrocution, keep all connections dry and off the ground.
Do not touch plug with wet hands.

MAINTENANCE

Although the Gamma UV requires little maintenance, there are a few suggestions that will ensure the highest sterilization efficiency. When carrying out any maintenance, the unit must be disconnected from the power supply.

The quartz glass used in the Gamma allows the highest transmission in the industry. This light transmission can be affected by calcium and other mineral deposits on the sleeve. It is recommended that the sleeve be removed every 6 months and soaked in vinegar or any calcium/hard water stain remover to remove these deposits. While soaking the quartz sleeve, it is also recommended that you circulate fresh water through the sterilizer to remove any debris. Rinse well in a sink or with a hose and allow the quartz sleeve to dry before re-installing into the Gamma UV body. Pump maintenance can also be performed at this time.

The T-5 lamp in the UV should be replaced every 9-10 months for maximum efficiency. Replacing the lamp with Current USA brand germicidal lamp ensures the highest performance.

WINTERIZING

Using this unit in extremely cold temperatures or allowing water to freeze inside the body can severely damage the unit. It is recommended to shut down the unit if the outdoor temperature drops below 50° F.

WARRANTY

CURRENT USA, INC. ONE-YEAR LIMITED WARRANTY

Current USA, Inc. warrants this product against defects in materials and workmanship of a period for ONE (1) YEAR from the date of original retail purchase. Light Bulbs carry a 3 month warranty.

Note: Current-USA, Inc. One-Year Limited Warranty does not cover damage caused by the following: Improper installation, saltwater corrosion, and electrical surges.

If you discover a defect, Current USA, Inc. will, at its option, repair or replace the product at no charge to you, provided you return it during the warranty period. It is required that you present this warranty card and a copy of the bill of sale as proof of original purchase date, in the event the product needs repairs, within the warranty period. Please see your dealer for return options. This warranty applies only to products by or for Current USA, Inc. that can be identified by trade name, or logo affixed to them. Current-USA, Inc. does not warrant any products that are not Current-USA, Inc. products. This warranty does not apply if the product has been damaged by accident, abuse, misuse or misapplication or if the product has been modified without the written permission of Current-USA, Inc.; or if any Current-USA, Inc. logos have been removed or defaced.

THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHERS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. Current USA, Inc. SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING ANIMALS, PLANTS, TANKS OR OTHER AQUARIUM RELATED ITEMS AND/OR EQUIPMENT. Current USA, Inc. IS NOT RESPONSIBLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY, OR REPLACEMENT OF EQUIPMENT OR PROPERTY, OR ANY COSTS OF RECOVERING OR REPRODUCING ANY EQUIPMENT, ANIMALS OR PLANTS USED OR GROWN WITH Current USA, Inc. PRODUCTS.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or exclusions of implied warranties, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from jurisdiction to jurisdiction.